

INSTALLER MANUAL

Pellet Stove



New






©2022 CADEL srl | All rights reserved - Tutti i diritti riservati

**ATENA³ PLUS 12/14 - DUKE 12/14 AIRTIGHT- SABA 12/14
MITHOS³ PLUS 12/14 - MITHOS PLUS 12/14 PS**

SUMMARY

| | | |
|-----------|---|-----------|
| 1 | MANUAL SIMBOLOGY | 3 |
| 2 | PACKAGING AND HANDLING | 3 |
| 2.1 | PACKAGING | 3 |
| 2.2 | REMOVING THE STOVE FROM THE PALLET | 3 |
| 2.3 | STOVE HANDLING..... | 4 |
| 3 | CHIMNEY FLUE | 4 |
| 3.1 | PREPARING THE SMOKE EXPULSION SYSTEM..... | 4 |
| 3.2 | CHIMNEY COMPONENTS | 4 |
| 3.3 | SMOKE DUCT (SMOKE FITTING)..... | 5 |
| 3.4 | FLUE (CHIMNEY OR PIPED DUCT) | 5 |
| 3.5 | CHIMNEY POT..... | 6 |
| 3.6 | MAINTENANCE..... | 7 |
| 4 | COMBUSTION AIR | 7 |
| 4.1 | AIR INLET | 7 |
| 4.2 | COMBUSTIBLE AIR INLET FOR SEALED-CHAMBER INSTALLATION | 8 |
| 5 | EXAMPLES OF INSTALLATION (DIAMETERS AND LENGTHS TO BE SIZED) | 9 |
| 6 | INSTALLATION | 10 |
| 6.1 | INTRODUCTION | 10 |
| 6.2 | MINIMUM DISTANCES..... | 11 |
| 6.3 | OVERALL DIMENSIONS | 12 |
| 6.4 | STOVE DOOR REMOVAL/INSTALLATION | 15 |
| 6.5 | REMOVAL OF CAST IRON COVER AND CAPS (ATENA ³ PLUS 12/14 - DUKE 12/14 AIRTIGHT) | 15 |
| 6.6 | REMOVAL/ASSEMBLY OF SIDE PANELS (DUKE 12/14 AIRTIGHT - SABA 12/14)..... | 16 |
| 6.7 | REMOVAL/ASSEMBLY OF BACK PANELS (ATENA ³ PLUS 12/14)..... | 17 |
| 6.8 | REMOVAL/ASSEMBLY OF TILE PROFILES (ATENA ³ PLUS 12/14)..... | 17 |
| 6.9 | REMOVAL/ASSEMBLY OF METAL PROFILES (ATENA ³ PLUS 12/14)..... | 18 |
| 6.10 | TILES ASSEMBLY (ATENA ³ PLUS 12/14)..... | 18 |
| 6.11 | METAL FRAME ASSEMBLY (MITHOS ³ PLUS 12/14) | 19 |
| 6.12 | MOUNTING SERPENTINE STONE FRAME (MITHOS) | 20 |
| 6.13 | REMOVAL OF SIDE PANELS (MITHOS ³ PLUS 12/14) | 23 |
| 6.15 | REAR OR UPPER FUME EXHAUST (ATENA PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14) | 23 |
| 6.16 | CONCENTRIC PIPE-KIT ASSEMBLY (ATENA PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14) | 24 |
| 6.17 | HOT AIR DUCTING SYSTEM (ATENA ³ PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14)..... | 25 |
| 6.18 | HOT AIR DUCTING (MITHOS ³ PLUS 12/14) | 27 |
| 6.19 | USING THE STOVE WITHOUT DUCTING (ATENA ³ PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14) | 30 |
| 6.20 | ELECTRIC CONNECTION | 31 |
| 6.21 | STOVE CALIBRATION AND DEPRESSION MEASUREMENT | 31 |
| 6.22 | CONNECTION TO THE EXTERNAL THERMOSTAT | 32 |
| 7 | SPECIAL MAINTENANCE | 33 |
| 7.1 | INTRODUCTION | 33 |
| 7.2 | FUME CHAMBER CLEANING | 33 |
| 7.3 | FUME CONDUIT CLEANING..... | 34 |
| 7.4 | FUME PASSAGE CLEANING..... | 34 |
| 7.5 | FUME FAN CLEANING | 35 |
| 7.6 | ROOM FAN CLEANING | 36 |
| 8 | IN CASE OF ANOMALY | 36 |
| 8.1 | PROBLEM SOLVING | 36 |
| 9 | TECHNICAL DATAS | 39 |
| 9.1 | REPAIR INFORMATION | 39 |
| 10 | FEATURES | 40 |

1 MANUAL SIMBOLOGY

| | |
|---|--|
|  | USER |
|  | AUTHORISED TECHNICIAN (ONLY to interpret or the Stove-manufacturer or the Authorized Technician of Technical Assistance Service approved by the Stove-manufacturer) |
|  | SPECIALIZED STOVE-REPAIRER |
|  | CAUTION: READ CAREFULLY THE NOTE |
|  | CAUTION: DANGER OR IRREVERSIBLE DAMAGE POSSIBILITY |

- The icons with the stylized figures indicates whom the subject dealt in the paragraph is addressed to (between the User and/or the Authorized Technician and/or the Specialized Stove-repairer).
- WARNING symbols indicates an important note.

2 PACKAGING AND HANDLING

2.1 PACKAGING

- The packaging is made up of recyclable cardboard boxes according to RESY standards, recyclable expanded polystyrene inserts and wooden pallets.
- All packaging materials can be re-used for a similar use or eventually discharged as waste assimilable to the municipal solid ones, in accordance with current regulations.
- After having removed the packaging please assure you about the integrity of the product.

2.2 REMOVING THE STOVE FROM THE PALLET

Proceed as follows:

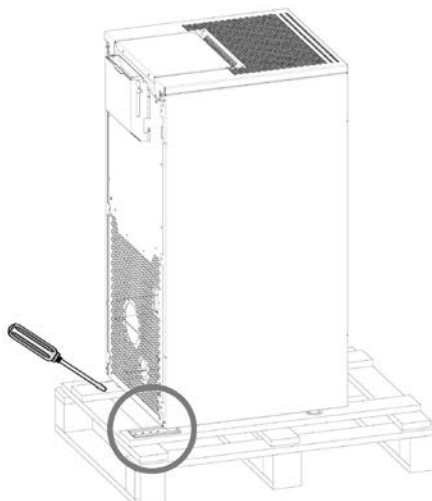


Fig. 1 - Bracket removal

- Remove the brackets which secure the feet of the stove (see **Fig. 1**). Then remove the stove from the pallet.

2.3 STOVE HANDLING

Both whether the stove is packed or not it is necessary to observe the following instructions for handling and transporting the stove from its sale point to its installation point and for any future movements:

- The stove must be handled with idoneous means paying attention to the existing safety regulations;
- do not turn the stove upside down and/or upset it on one side, but keep it in vertical position or as accorded with the constructor instructions;
- if the stove is made up of ceramic, stone, glass or any particularly fragile material components, all must be moved with the utmost care.

3 CHIMNEY FLUE

3.1 PREPARING THE SMOKE EXPULSION SYSTEM

The combustion product expulsion system is a particularly important element for the proper operation of the appliance and must be correctly sized according to EN 13384-1.

Its creation/adaptation/verification must always be carried out by a legally qualified operator and must comply with the regulations in force in the country where the appliance is installed.

The Manufacturer declines all liability for malfunctions caused by a badly sized and non-compliant smoke expulsion system.

3.2 CHIMNEY COMPONENTS

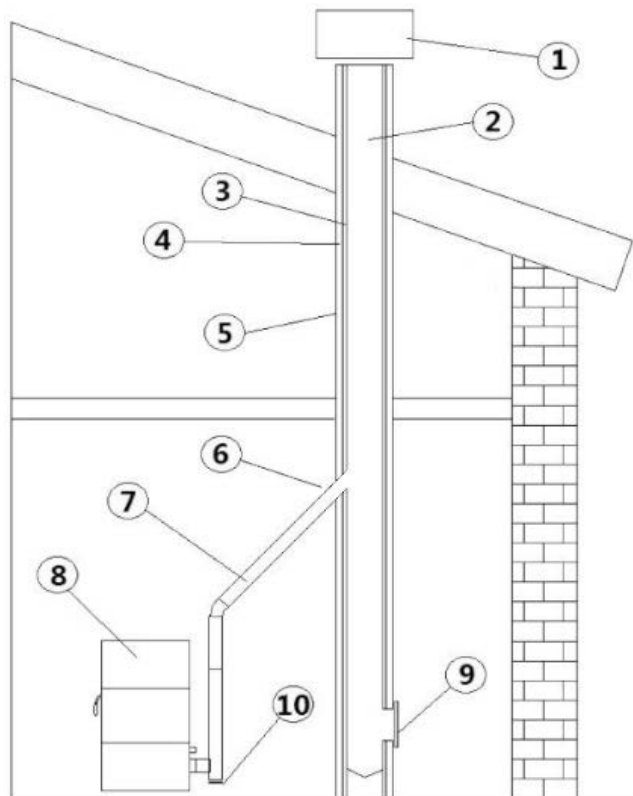


Fig. 2 - Chimney components

| LEGEND | Fig. 2 |
|--------|------------------------------|
| 1 | Chimney pot |
| 2 | Fume outlet |
| 3 | Chimney flue |
| 4 | Thermal insulation |
| 5 | External wall |
| 6 | Chimney union |
| 7 | Fume pipe |
| 8 | Heat generator |
| 9 | Inspection door |
| 10 | T-union with inspection plug |

3.3 SMOKE DUCT (SMOKE FITTING)

The smoke duct is the pipe that connects the appliance to the flue.

This smoke fitting must comply in particular with the following requirements:

- comply with product standard EN 1856-2;
- its cross-section must be of constant diameter and no less than that of the appliance outlet, from the firebox outlet up to the connection in the flue;
- the horizontal section must be as short as possible and extend no more than 4 metres;
- the horizontal sections must have a minimum upward slope of 3%;
- changes of direction must have an angle no greater than 90° and be easy to inspect
- the number of changes of direction, including that for entry into the flue, and exclusion of the T in the event of a side or rear outlet, must not exceed 3;
- it must be insulated if it passes outside the installation room
- it must not in any case cross rooms in which it is forbidden to install combustion appliances.
- the use of flexible metal and fibre cement or aluminium hoses is forbidden;

In any case, smoke ducts must be sealed against combustion products and any condensation. For this reason, it is recommended to use pipes with silicone gaskets or similar sealing devices that withstand the operating temperatures of the appliance (e.g. T200 P1) and that by removing the gaskets, are still T400 N1 G certified.

| SYSTEM TYPE | Ø80 mm PIPE | Ø100 mm PIPE |
|--|-------------|--------------|
| Minimum vertical length | 1,5 mt | 2 mt |
| Maximum length (with 1 union) | 6,5 mt | 10 mt |
| Maximum length (with 3 unions) | 4,5 mt | 8 mt |
| Maximum number of unions | 3 | 3 |
| Level section (minimum inclination 3%) | 4 mt | 4 mt |
| Installation at a height above 1200 m a.s.l. | NO | Obligatory |

3.4 FLUE (CHIMNEY OR PIPED DUCT)

When creating the flue, in particular comply with the following requirements:

- comply with the applicable product standard (EN 1856, EN 1857 EN 1457, EN 1806, EN 13063..);
- be made with suitable materials to ensure resistance to normal mechanical, chemical, thermal stresses and have adequate thermal insulation in order to limit the formation of condensate;
- have a predominantly vertical configuration and be free of choke points along its entire length;
- be correctly spaced by air gaps and isolated from combustible materials;
- the flue inside the house must still be insulated and can be inserted in an air shaft provided it complies with the regulations for piping;
- the smoke duct must be connected to the flue by means of a Tee fitting with an inspectable collection chamber for the collection of soot and any condensate.
- where the sizing provides for wet operation, a suitable condensate collection and siphon discharge system must be set up.



We recommend checking the data plates of the flue for the safety distances that must be observed in the presence of combustible materials and, if necessary, the type of insulating material to be used. It is forbidden to connect the stove to a collective or shared flue with other combustion appliances or with hood outlets.

It is forbidden to use the direct drain on the wall or towards indoor spaces and any other form of drain not provided for by the regulation in force in the country of installation.

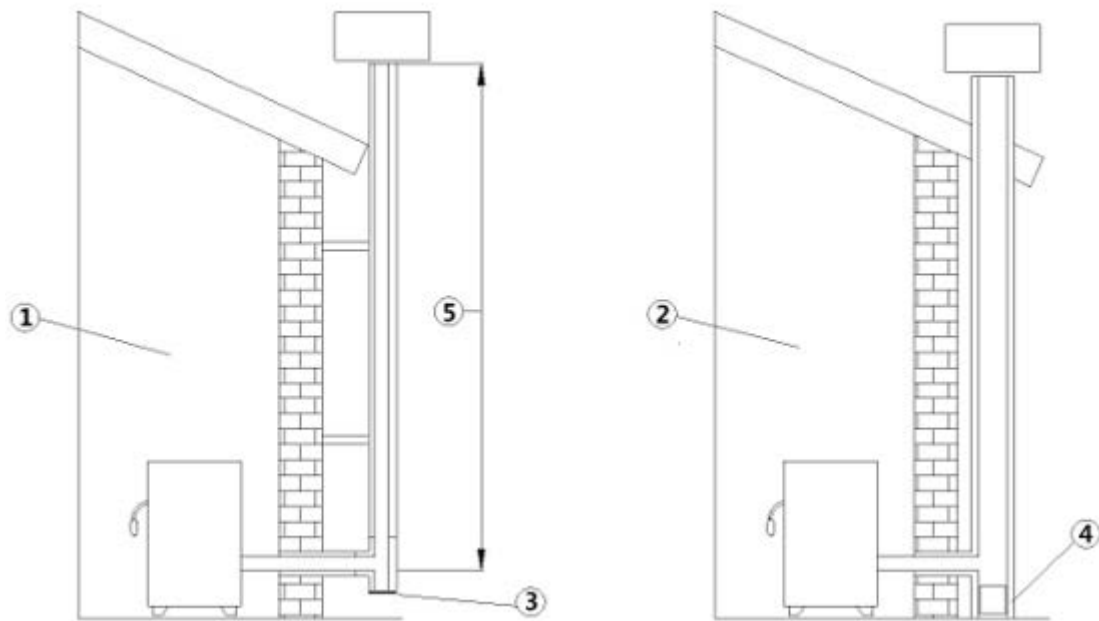


Fig. 3 - Chimney Flues

| LEGEND | Fig. 3 |
|--------|---|
| 1 | Chimney flue with insulated stainless-steel pipes |
| 2 | Chimney flue on the existing chimney |
| 3 | Inspection plug |
| 4 | Inspection door |

- The chimney flue must be provided CE in accordance with EN 1443 regulation. Please find attached an example of label:



Fig. 4 - Example of label

3.5 CHIMNEY POT

The chimney pot, meaning the end part of the flue, must meet the following characteristics:

- the smoke outlet section must be at least double the internal section of the chimney;
- prevent the penetration of rain or snow;
- ensure the outlet of smoke even in the event of wind (windproof chimney pot);
- the height of outflow must be beyond the reflux area (**) (refer to national regulations to identify the reflux area);
- always be built at a distance from antennas or dishes, and never be used as a support.

(**) unless there are specific national derogations (clearly specified in the corresponding instruction manual in English) which under appropriate conditions allow it; in this case, strictly follow the product/installation requirements of the relative regulations/technical specifications/legislation in force in that country.

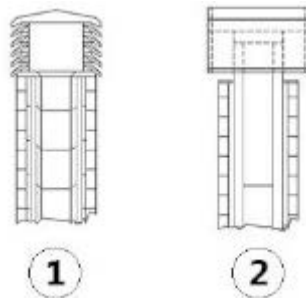


Fig. 5 - Anti-wind chimney pots

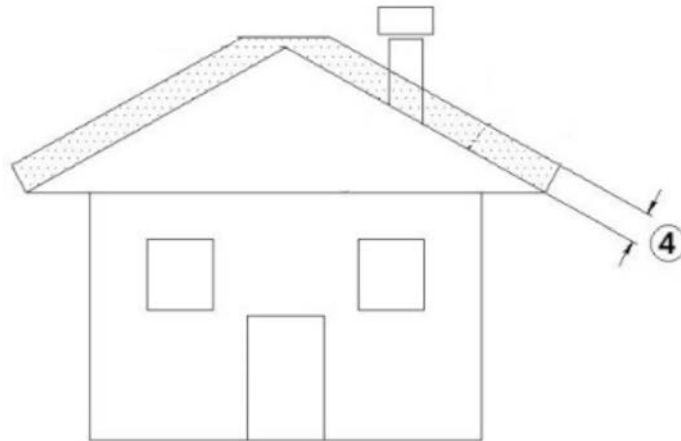


Fig. 6 - Reflux area

3.6 MAINTENANCE

- The fumes extraction pipes (fumes conduit + chimney flue + chimney pot) must always be cleaned, scrubbed and checked by an expert stove-repairer, in compliance with current regulations, with the instructions of the stove-manufacturer and the directives of your insurance company.
- In case of doubts, please follow the most restrictive regulations.
- Have your chimney flue and chimney pot checked and cleaned by an expert chimney sweep at least once a week. The chimney sweep has to release a written declaration about the security of the system.
- Not cleaning compromise safety.

4 COMBUSTION AIR

4.1 AIR INLET

It is mandatory to provide an adequate external air inlet that supplies the combustion air required for the product to work properly. The flow of air between the outside and the installation room can take place with a free air inlet or by channelling the air directly to the outside (***) .

The free air inlet must:

- be made at floor level;
- always be protected with an outer grille and in such a way that it cannot be obstructed by any object;
- have a minimum total free area of 80 cm² (net of the grille);

The presence of other suction devices (e.g.: vmc, electric fan for stale air extraction, kitchen hood, other stoves, etc.), in the same room could cause negative pressure in the room. In this case, with the exception of sealed installations, one must verify that, with all the equipment on, no more than 4 Pa of negative pressure is created inside the installation room with respect to the outside. If necessary, increase the air inlet section.

It is possible to duct the air required for combustion to the outside by connecting the external air inlet directly with the combustion air inlet which is usually found on the back of the appliance.

The duct must comply with the following dimensions (each 90° bend is equivalent to one linear metre):

*(***) In the event the combustion air is ducted on unsealed products, still verify that no more than 4 Pa of negative pressure is created inside the installation room with respect to the outside, otherwise provide for an additional air intake in the room.*

Below 15 kW:

| Air duct diameter | Maximum length (smooth duct) | Maximum length (corrugated duct) |
|-------------------|------------------------------|----------------------------------|
| 50 mm | 2 m | 1 m |
| 60 mm | 3 m | 2 m |
| 80 mm | 7 m | 4 m |
| 100 mm | 12 m | 9 m |

Above 15 kW:

| Air duct diameter | Maximum length (smooth duct) | Maximum length (corrugated duct) |
|-------------------|------------------------------|----------------------------------|
| 50 mm | - | - |
| 60 mm | 1 m | - |
| 80 mm | 3 m | 1 m |
| 100 mm | 7 m | 4 m |

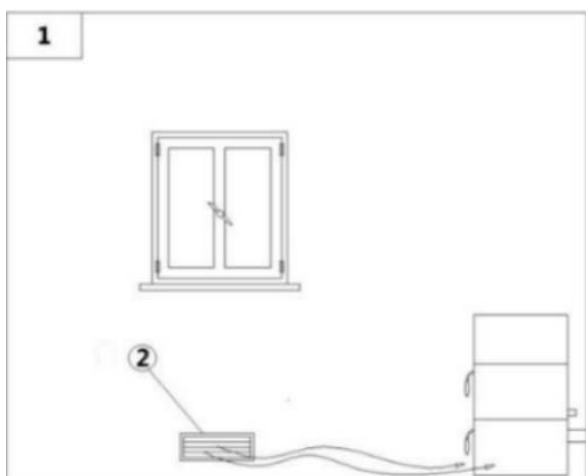


Fig. 7 - Direct air inflow

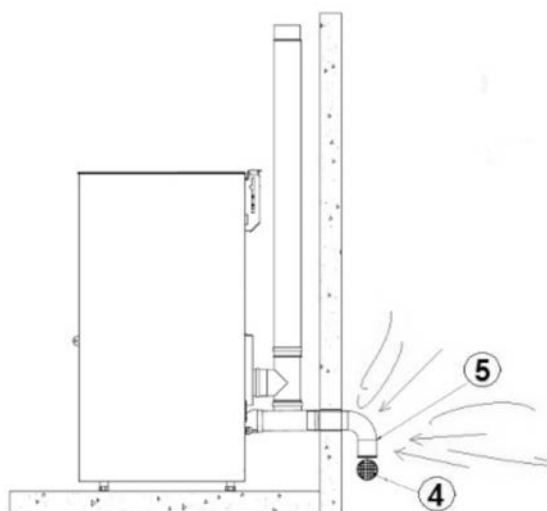


Fig. 8 - Air inlet for sealed-chamber installation

| LEGEND | Fig. 7 Fig. 8 |
|--------|-------------------------------|
| 1 | Room to ventilate |
| 2 | External air inlet |
| 4 | Shield grid |
| 5 | Curve inlet to turn downwards |

4.2 COMBUSTIBLE AIR INLET FOR SEALED-CHAMBER INSTALLATION

How to connect to the stove in the sealed chamber with concentric system:



Fig. 9 - Phase1

- Connect the air intake pipe to the combustion air pipe of the stove and tighten everything with a clamp (see [Fig. 9]).

5 EXAMPLES OF INSTALLATION (DIAMETERS AND LENGTHS TO BE SIZED)

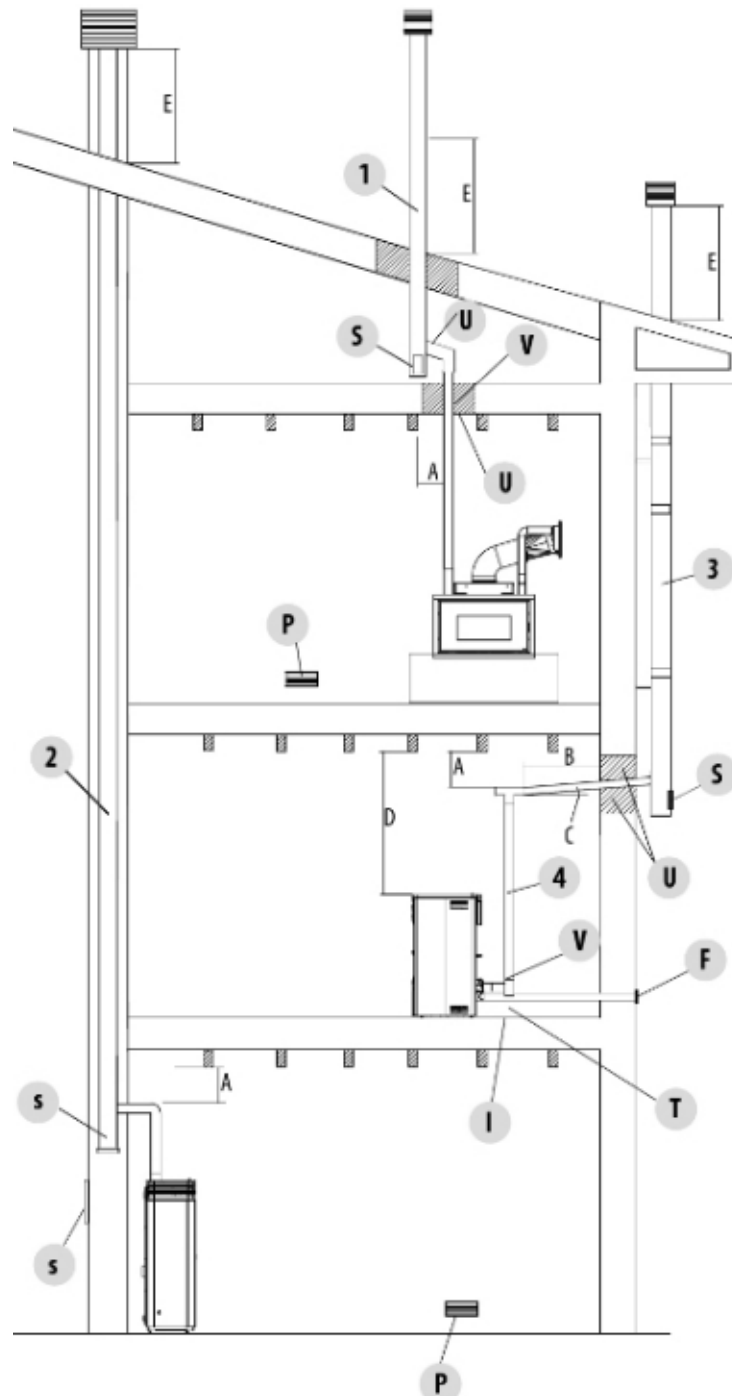


Fig. 10 - Chimney flue

- 1.** Flue installation with hole for the passage of the pipe increased by:
 minimum 100mm around the pipe if next to non-flammable parts such as cement, brick, etc.; or
 minimum 300mm around the pipe (or as required by plate data) if next to flammable parts such as wood etc.
 In both cases, install suitable insulation between the flue and the ceiling.
 Always check and comply with the plate data of the flue, specifically the minimum safety distances from combustible materials.
 The previous rules also apply for holes made in walls.
- 2.** Old flue, pipe with the inclusion of an external access door for chimney cleaning.
- 3.** External flue made of insulated stainless-steel pipes, i.e. with double walls: all securely mounted on the wall. With windproof chimneypot.
- 4.** Ducting system using Tee fittings that allow easy access for cleaning without having to remove the pipes.

| LEGEND | Fig. 10 |
|----------|---|
| U | Insulation |
| V | Possible diameter increase |
| I | Inspection cap |
| S | Inspection access panel |
| P | Air inlet |
| T | Tee fitting with inspection cap |
| A | Distance from flammable material (smoke duct plate) |
| B | Maximum 4 m |
| C | Minimum 3° slope |
| D | Distance from flammable material (appliance plate) |
| E | Reflux area |
| F | Air ducting |



The instructions in this chapter refer explicitly to the Italian installation regulation UNI 10683. In any case, always observe the regulations in force in the country of installation.

6 INSTALLATION

6.1 INTRODUCTION

The heating system (generator + combustion air supply + combustion product expulsion system + any hydraulic/aerualic system) must be installed in compliance with the laws and regulations in force (*), and carried out by a qualified technician, who must issue a declaration of conformity of the system to the system manager and shall undertake full responsibility for final installation and consequent good operation of the product.

The manufacturer declines all responsibility in the event of installations that do not comply with the laws and regulations in force and inappropriate use of the appliance.

In particular one must ensure that:

- the environment is suitable for installing the appliance (floor load-bearing capacity, presence or possibility of creating an adequate electrical/hydraulic/aerualic system when required, volume compatible with the appliance characteristics, etc.);
- the appliance is connected to a smoke expulsion system correctly sized according to EN 13384-1, which is resistant to soot fire and which complies with the distances prescribed by the combustible materials indicated on the plate data;
- there is a suitable combustion air flow to the appliance;
- other combustion appliances or extraction devices installed do not cause a negative pressure of more than 4 Pa in the room where the product is installed compared to the outside (only sealed appliances are allowed a maximum of 15 Pa of negative pressure in the room).

(*): *The national reference standard for the installation of domestic appliances is UNI 10683 (IT) - DTU NF 24.1 (FR) - DIN 18896 (DE) - NBN B 61-002 (BE) - Real Decreto 1027/2007 (ES) - Paesi Bassi (NL) Bouwbesluit - Danmark (DK) BEK n° 541 del 27/04/2020.*

In particular, it is recommended to strictly observe the safety distances from combustible materials to avoid serious harm to people and to the integrity of the home.

Installation of the appliance must ensure easy access to service the appliance itself, the smoke channels and the flue. Always maintain adequate distance and protection in order to prevent the product from coming into contact with water.

It is forbidden to install the stove in rooms with a fire hazard.

With the exception of sealed installations, it is also forbidden for liquid fuel appliances with continuous or intermittent operation that draw the combustion air from the room they are installed in or B-type gas heating appliances, with or without the production of domestic hot water, to coexist in the same room or in interconnecting rooms.



Sealed installation means that the product is certified as sealed and its installation (ducting of the combustion air and connection to the chimney) is airtight with respect to the installation environment.

A sealed installation does not consume the room's oxygen because it draws all the air from the outer environment (if suitably ducted) and makes it possible to install the product in all houses that require a high degree of insulation such as "passive" or "high energy efficiency" houses. Thanks to this technology there is no risk of smoke emissions in the room and no air inlets - hence not even the relevant ventilation grilles - are required in the installation premises. Consequently, there will be more draughts of cold air in the room, thus making it more comfortable and increasing the overall efficiency of the system. The sealed stove in a sealed installation is compatible with the presence of forced ventilation or premises that might have negative pressure with respect to the outside.

6.2 MINIMUM DISTANCES

Observe the distances from flammable objects (sofas, furniture, wood panelling, etc..) as specified in the following diagram. If objects considered to be particularly sensitive to heat are present, such as furniture, curtains or sofas, as a precaution, increase the stove clearances substantially to avoid possible deterioration due to the effect of heat.

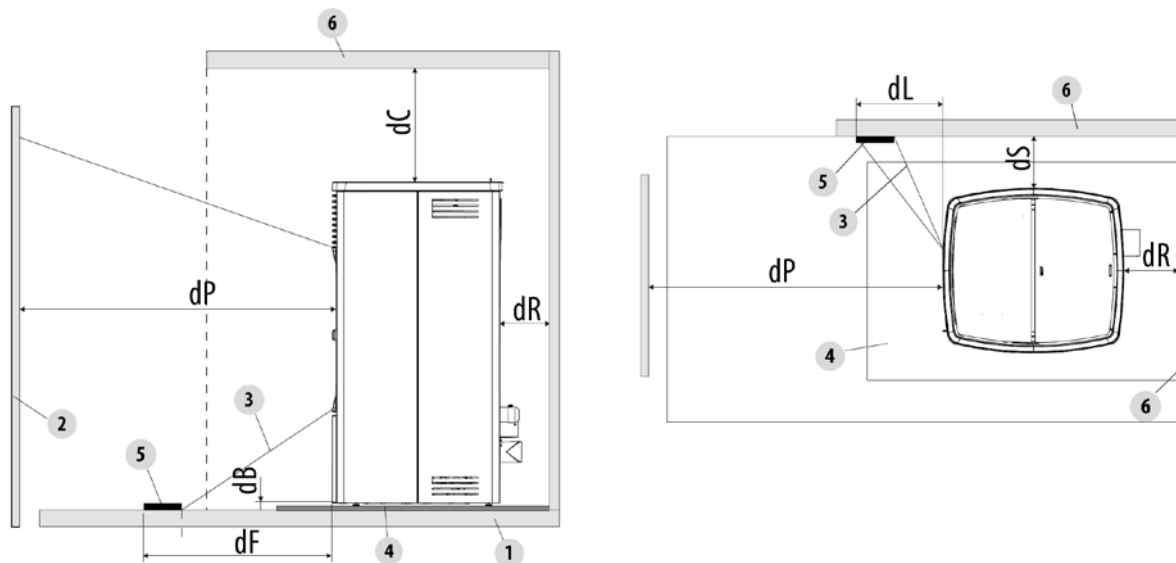


Fig. 11 - Safety distances from combustible material.

| .LEGENDA | Fig. 11 |
|-----------------------------|-----------------------------------|
| dR (rear distance) | 200 mm |
| dS (side distance) | 300 mm |
| dB (lower distance) | 0 mm |
| dC (upper distance) | 750 mm |
| dP (front radiation) | 1000 mm |
| dF (floor radiation) | 1000 mm |
| dL (side radiation) | 1000 mm |
| 1 | FLOOR |
| 2 | FRONT FLAMMABLE MATERIAL |
| 3 | AREA SUBJECT TO RADIATION |
| 4 | FLOOR GUARD |
| 5 | RADIATED SURFACE TO BE PROTECTED |
| 6 | REAR/SIDE/UPPER FLAMMABLE SURFACE |

If the floor is made of combustible material, use a protection made of non-combustible material (steel, glass...) that also protects the front from any falling combusted material during cleaning operations.



Always fit a floor guard if the floor is made of flammable material.

Install the stove also detached from any non-combustible walls/surfaces, observing a minimum clearance of **200mm** (back) and **300mm** (side) to allow effective aeration of the appliance and a good distribution of heat in the room.

In any case, ensure adequate distance to facilitate access during cleaning and extraordinary maintenance. If this is not possible, it must still be possible to distance the product from adjacent walls/elements.

This operation (1*) must be performed by a technician qualified to disconnect the combustion product expulsion ducts and their subsequent restoration.

For generators connected to the hydraulic system, a connection must be provided between the system itself and the product so that, during extraordinary maintenance, carried out by a qualified technician, it is possible to move the generator 1 by at least 50 cm from adjacent walls without emptying the system (e.g. by using a double shut-off gate or suitable flexible connection).

(1*) The national reference standard for the installation of domestic appliances is UNI 10683 (IT) - DTU NF 24.1 (FR) - DIN 18896 (DE) - NBN B 61-002 (BE) - Real Decreto 1027/2007 (ES) Paesi Bassi (NL) Bouwbesluit - Danmark (DK) BEK n° 541 del 27/04/2020.

6.3 OVERALL DIMENSIONS

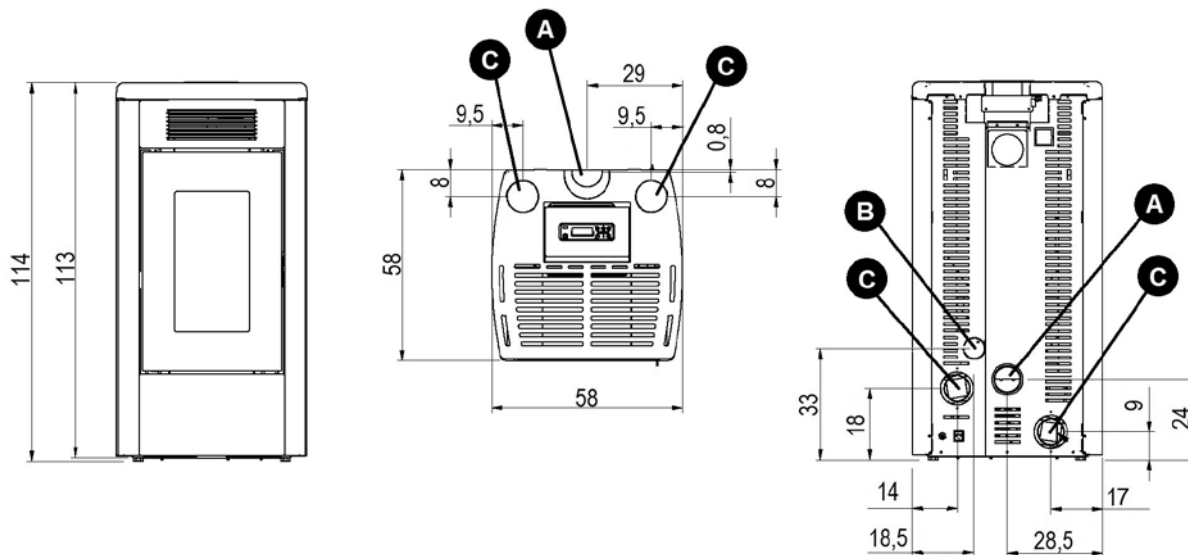


Fig. 12 - General dimensions: Atena³ Plus 12/14

LEGEND Fig. 12

| | |
|---|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

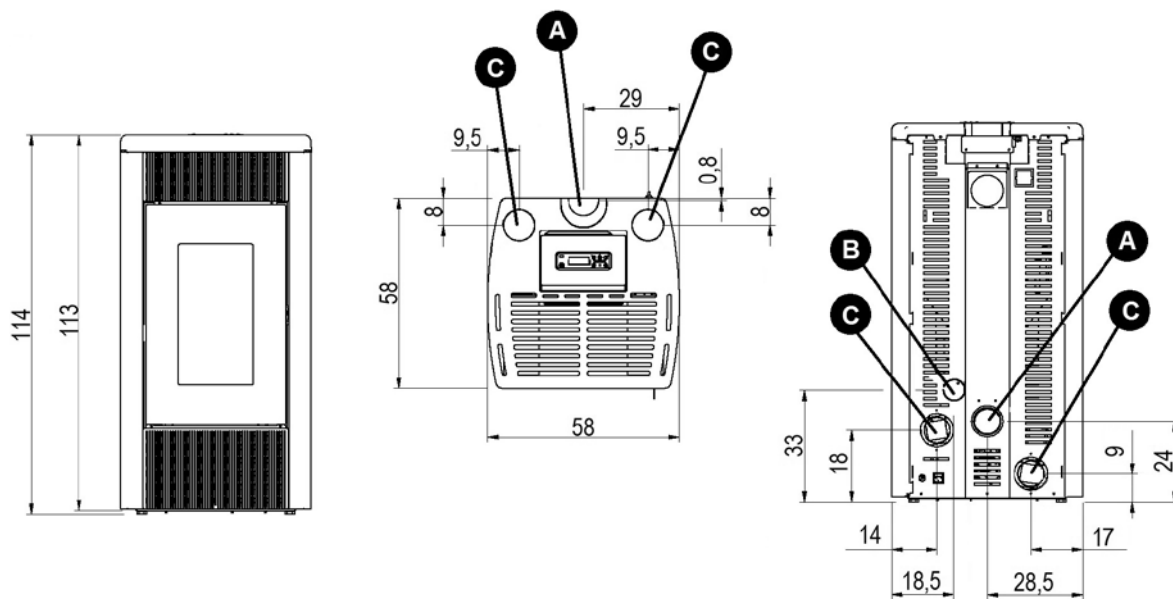


Fig. 13 - General dimensions: Duke 12/14 Airtight

LEGEND Fig. 13

| | |
|---|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

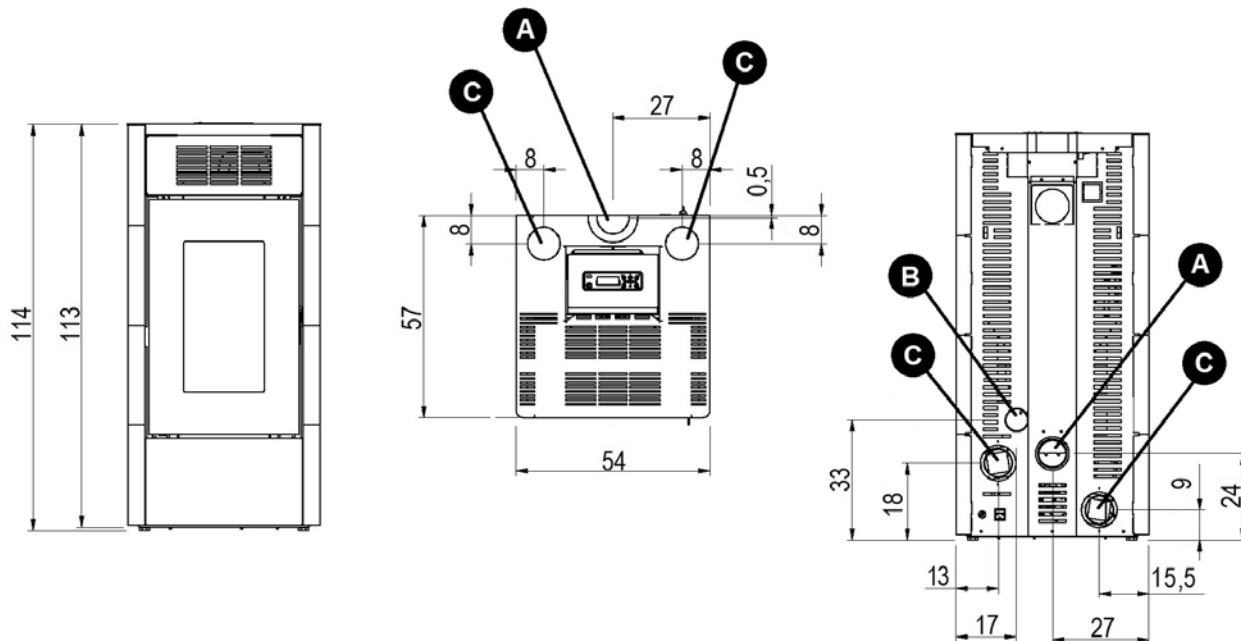


Fig. 14 - General dimensions: Saba 12/14

LEGEND Fig. 14

| | |
|----------|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

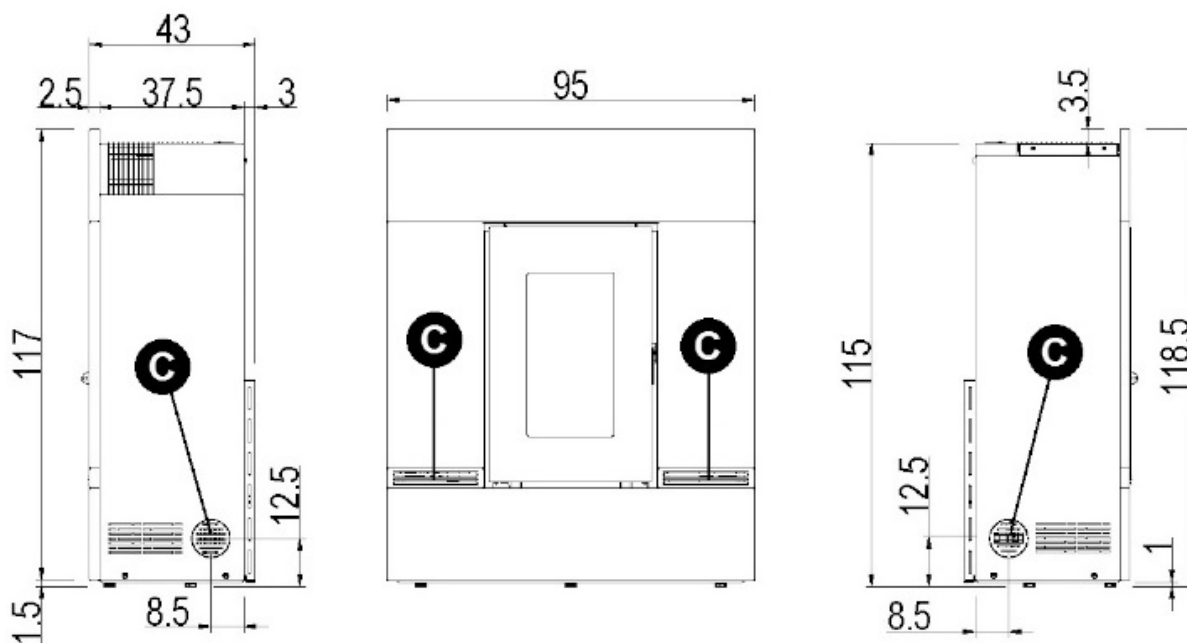


Fig. 15 - General dimensions: Mithos³ Plus 12/14

LEGEND Fig. 15

| | |
|----------|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

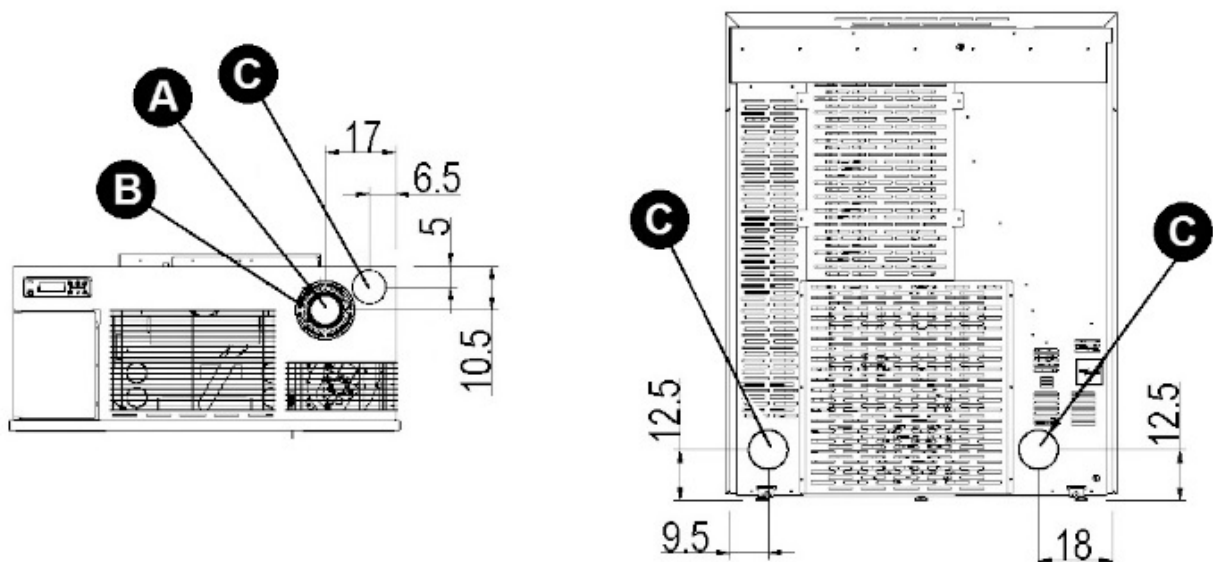


Fig. 16 - General dimensions: Mithos³ Plus 12/14

| LEGEND | Fig. 16 |
|--------|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

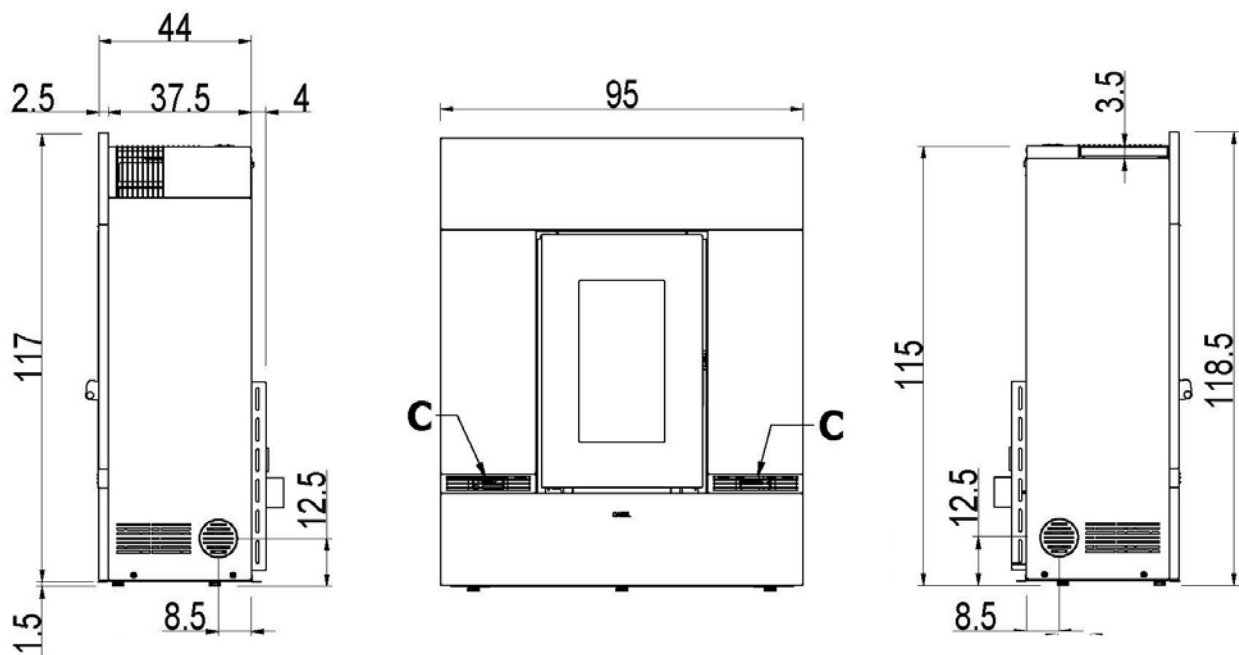


Fig. 17 - General dimensions: Mithos Plus 12/14 PS

| LEGEND | Fig. 17 |
|--------|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

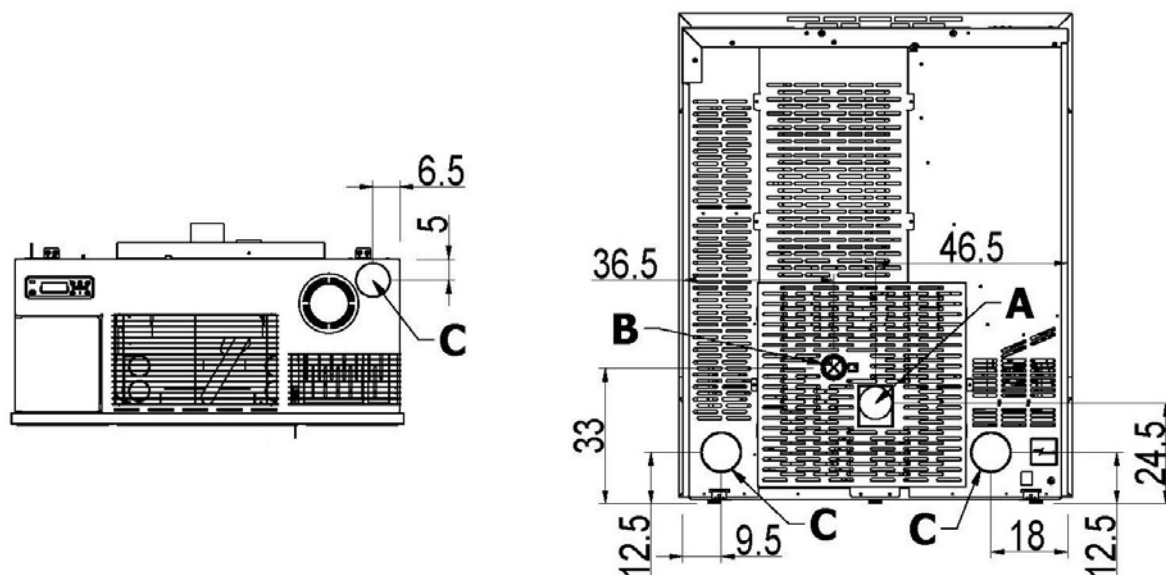


Fig. 18 - General dimensions: Mithos Plus 12/14 PS

| LEGEND | Fig. 18 |
|--------|----------------------------------|
| A | Exhaust fumes d.8 cm |
| B | Hole combustion air inlet d.6 cm |
| C | Ducting outlet d.8 cm |

6.4 STOVE DOOR REMOVAL/INSTALLATION

DOOR REMOVAL

For some operations (e.g.: side panel assembly and cleaning) you must remove the stove door.

To remove the door:

- Open the door.
- Use a screwdriver to rotate the lever in the direction of the arrow (vedi **Fig. 19**).
- Lift the door to allow the door pivots to slide out of the structure bracket (see **Fig. 20**).
- Keep the door in a safe place until next use.



Fig. 19 - Remove screws



Fig. 20 - Door removal

DOOR ASSEMBLY

To assemble the door you must centre the pivots fixed to the door, on the structure bracket.

After having mounted the door with the screwdriver, lift the lever so that the door is locked.

6.5 REMOVAL OF CAST IRON COVER AND CAPS (ATENA³ PLUS 12/14 - DUKE 12/14 AIRTIGHT)



ATTENTION: it takes 2 persons to lift the cover.

To remove the cast-iron cover, proceed as follows:

- Undo the 2 back screws (see **Fig. 21**).
- Lift the cast iron cover (see **Fig. 22**).



Fig. 21 - Remove the screws



Fig. 22 - Remove the cover

To remove the cast-iron caps, proceed as follows:

- Push on one side of the cap and remove it (see **Fig. 23**).



Fig. 23 - Remove cap

6.6 REMOVAL/ASSEMBLY OF SIDE PANELS (DUKE 12/14 AIRTIGHT - SABA 12/14)

To disassemble the side panels, proceed as follows:

- Undo the screws of the upper panel (see **Fig. 24**) and release the panel (see **Fig. 25**).
- Release the lower panel (see **Fig. 26**).



Fig. 24 - Remove the screws



Fig. 25 - Release upper panel



Fig. 26 - Release lower panel

- Undo the front screws of the side panel (see **Fig. 27**).
- Open the panel at the back (see **Fig. 28**).

- To assemble proceed in reverse order.



Fig. 27 - Remove screws



Fig. 28 - Release side panel

6.7 REMOVAL/ASSEMBLY OF BACK PANELS (ATENA³ PLUS 12/14)

To disassemble the back panels, proceed as follows:

- Remove the cast iron cover (see dedicated chapter).
- Undo the front screws of the black panel (see **Fig. 29**).
- Open the panel and release the rear teeth (see **Fig. 30**).
- To assemble proceed in reverse order.



Fig. 29 - Remove the screws



Fig. 30 - Remove the side panels

6.8 REMOVAL/ASSEMBLY OF TILE PROFILES (ATENA³ PLUS 12/14)

To disassemble the front profiles, proceed as follows:

- Remove the cast iron cover (see dedicated chapter).
- Push the panel with the tiles upwards and release it from the stove (see **Fig. 31**).
- To assemble proceed in reverse order.



Fig. 31 - Release the panel

6.9 REMOVAL/ASSEMBLY OF METAL PROFILES (ATENA³ PLUS 12/14)

To disassemble the front profiles, proceed as follows:

- Remove the cast iron cover (see dedicated chapter).
- Release both front panels (see **Fig. 32**).
- Undo the front screws of the profile (see **Fig. 33** and **Fig. 34**).



Fig. 32 - Remove the front panels



Fig. 33 - Remove the screws



Fig. 34 - Remove the screws

- Open the side and release the panel (see **Fig. 35**).
- To assemble proceed in reverse order.



Fig. 35 - Release the panel

6.10 TILES ASSEMBLY (ATENA³ PLUS 12/14)

To disassemble the tiles, proceed as follows:

- Place the tiles on a worktop and set the tile support above it.

- Have the holes of the profile match those of the tiles and apply all the screws (see **Fig. 36**).
- For assembly on the stove, see the next chapter.



Fig. 36 - Tiles assembly

6.11 METAL FRAME ASSEMBLY (MITHOS³ PLUS 12/14)

To assemble the frame, proceed as follows:

- Take the side panels and fold the 4 tabs outwards using pliers (see **Fig. 37** and **Fig. 38**).



Fig. 37 - Tabs



Fig. 38 - Fold the tabs outwards

- Fix the right and left panels with the screws (see **Fig. 39** e **Fig. 40**).
- Take the upper panel and fold the two tabs downwards (see **Fig. 41**).



Fig. 39 - Fix side panels



Fig. 40 - Fixed panels



Fig. 41 - Fold the tabs

- Fit the external hooks into the provided slots, taking care to match the head of the central screw with the hole in the panel (see **Fig. 42** e **Fig. 43**).
- To lock the upper panel, fix the previously folded tabs to the side panels with a screw (see **Fig. 44**).



Fig. 42 - Upper panel 1



Fig. 43 - Upper panel 2



Fig. 44 - Fix upper panel

- Take the lower panel and fold the 2 tabs upwards (see **Fig. 45**).
- Fit the external hooks into the provided slots (see **Fig. 46**).
- To lock the lower panel, fix the previously folded tabs to the air outlets (see **Fig. 47**).



Fig. 45 - Fold the tabs



Fig. 46 - Lower panel



Fig. 47 - Fix lower panel

6.12 MOUNTING SERPENTINE STONE FRAME (MITHOS)

To assemble the frame, proceed as follows:

- Lift the side flaps (on both sides) to fix the lower finish profile (see **Fig. 48 Fig. 49**)



Fig. 48 - Lift flaps 1

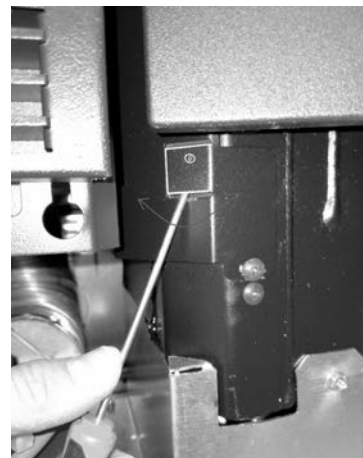


Fig. 49 - Lift flaps 2

- Loosen the air outlet vents **Fig. 50** (RH and LH) by undoing the 4 screws



Fig. 50 - Loosen vents

- Undo the two upper and lower screws on the LH and RH side as per image **Fig. 51 Fig. 52 Fig. 53**

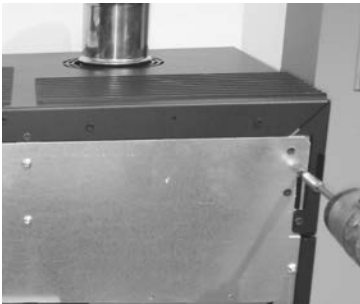


Fig. 51 - Unscrew 1

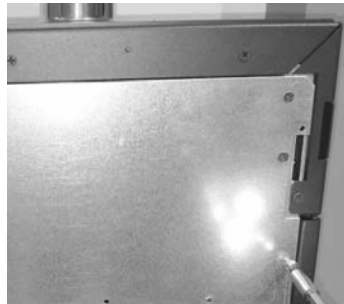


Fig. 52 - Unscrew 2

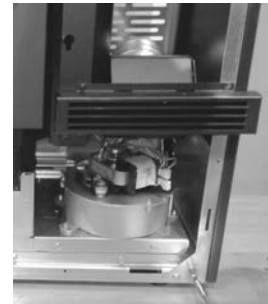


Fig. 53 - Unscrew 3

- Lifting the air outlet vent **Fig. 54**, put the RH and LH uprights in place **Fig. 55**, securing them with the supplied screws and in the same way secure the middle uprights **Fig. 56 Fig. 57**.



Fig. 54 - Lift vent



Fig. 55 - Insert upright

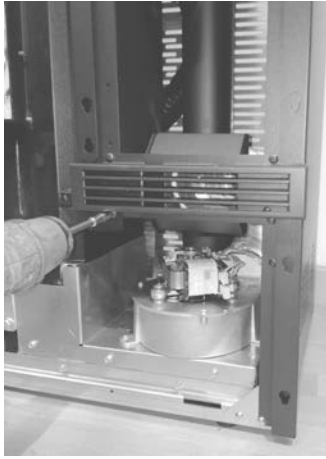


Fig. 56 - Fixing 1



Fig. 57 - Fixing 2

- Tighten the screws to the stone (see **Fig. 58**), the screw head must protrude about 1.5 mm (see **Fig. 59**).



Fig. 58 - Tighten the screws

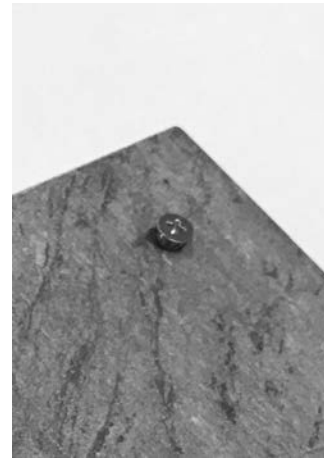


Fig. 59 - The screw must protrude

- Take the stone and fit the screw head in the appropriate hole in the brackets (see **Fig. 60** and **Fig. 61**).
- Proceed in the same way for all the stones (see **Fig. 62**).
- Follow the procedure in reverse order to remove.



Fig. 60 - Hook the stone

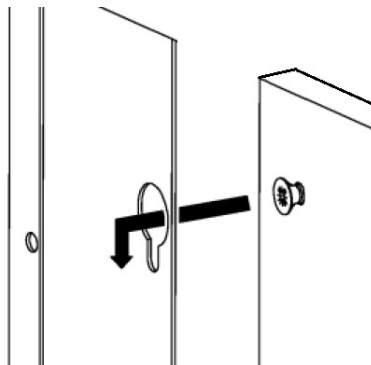


Fig. 61 - Detail of the hooking



Fig. 62 - Hook all the stones

- To finish off, position the bottom stone by inserting the finish profile on the top, screwing it on the side flaps as per point 1 **Fig. 63 Fig. 64**.



Fig. 63 - Position stone and profile



Fig. 64 - Screw on flaps

6.13 REMOVAL OF SIDE PANELS (MITHOS3 PLUS 12/14)

6.14

To disassemble the side panels, proceed as follows:

- Remove the 2 screws of the side from the bottom of the panel (see **Fig. 65**).
- Unhook the side panel (see **Fig. 66**).
- To assemble, proceed in reverse order.



Fig. 65 - Screw removal



Fig. 66 - Removing the side panel

6.15 REAR OR UPPER FUME EXHAUST (ATENA PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14)

The connection of the fume exhaust can be at the back or on top.

REAR EXHAUST



Fig. 67 - Connection of the fume exhaust

- Position the pipe as shown in **Fig. 67**.

UPPER EXHAUST



Fig. 68 - Remove the cap (Saba 14)



Fig. 69 - Remove the cap (Atena³ Plus 12/14 - Duke At)



Fig. 70 - Connect the Tee fitting

- Remove the cap at the back of the cover (see **Fig. 68** or **Fig. 69**).
- Connect a Tee fitting as shown in **Fig. 70**.



Fig. 71 - Lower the support



Fig. 72 - Connect the pipes



Fig. 73 - Rear fume exhaust mounted

- Bend the support at the back of the stove and insert the fume exhaust pipe (see **Fig. 71**).
- Connect the 2 pipes (see **Fig. 72** and secure it all with the clamp (see **Fig. 73**).

6.16 CONCENTRIC PIPE-KIT ASSEMBLY (ATENA PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14)

The stove is designed to be connected to a concentric pipe by means of a dedicated kit.

The upper exhaust with concentric pipe requires 1 kit code 5020004 (optional).

To assemble the kit, proceed as follows:

- Take the kit (see **Fig. 74**) and couple the pipe to the outlet of the fume exhaust of the stove (see **Fig. 75**).
- Insert the flexible pipe into the combustion air inlet pipe of the stove (see **Fig. 76**).



Fig. 74 - Concentric kit



Fig. 75 - Insert pipe d.80 mm



Fig. 76 - Insert combustion air pipe

- Secure the kit to the back of the stove with a clamp (see **Fig. 77**).
- The stove is ready to be connected to the flue (see **Fig. 78**).



Fig. 77 - Block with clamp



Fig. 78 - Position of the pipe

6.17 HOT AIR DUCTING SYSTEM (ATENA³ PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14)

The stove is fitted with 1 upper and 1 rear hot air outlets.

SOLUTION A: ducting with the rear hot air outlet (see **Fig. 79**).



Fig. 79 - Rear hot air outlet

- Position the 2 pipes as shown in (see **Fig. 79**).

SOLUTION B: ducting with the upper hot air outlet (see **Fig. 80**).
Top ducting requires 2 kits code 5020003 (optional).



Fig. 80 - Upper hot air outlet



Fig. 81 - Remove cap



Fig. 82 - Remove fan screws



Fig. 83 - Remove fan

- Remove the side panels and cover of the stove (see dedicated chapter).
- Remove the inspection door on the side near the ducting fans (see **Fig. 81**).
- Remove the screws of the fan (see **Fig. 82**).
- Turn the fan with the vent facing upwards and fix it (see **Fig. 83**).



Fig. 84 - Insert pipe

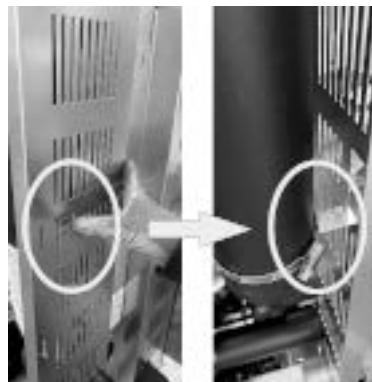


Fig. 85 - Fold the flap



Fig. 86 - Fix the pipes

- Insert the pipes in the specific seats and move it down until it is completely inserted (see **Fig. 84**).
- Bend the flap inwards with your hands (see **Fig. 85**).
- Using a flexible pipe, connect the fan vent and ducting pipe, securing them with the clamps (see **Fig. 86**).

SOLUTION C: ducting with the upper and rear hot air outlet (see **Fig. 87** and **Fig. 88**).
Top ducting requires 1 kit code 5020003 (optional).



Fig. 87 - Upper hot air outlet (right or left)



Fig. 88 - Rear hot air outlet (right or left)

- Position the pipes as described in **SOLUTION A** and **SOLUTION B**.

6.18 HOT AIR DUCTING (MITHOS3 PLUS 12/14)



Fig. 89 - Hot air outlet (default)

The stove is fitted with 2 hot air outlets and by default they are oriented in the 2 front outlets (see **Fig. 89**). These 2 outlets can be oriented differently: up and/or side and/or rear. To change the direction, proceed as follows:

SIDE DUCTING (RIGHT AND/OR LEFT)

- Remove the side panel (see **REMOVAL OF SIDE PANELS (MITHOS3 PLUS 12/14) a pag. 23**).
- Fold the tabs inwards (see **Fig. 90**).
- Remove the clamp and detach the hose from the vent of the grid (see **Fig. 91**).
- Rotate the hose towards the groove for the side outlet (see **Fig. 92**).

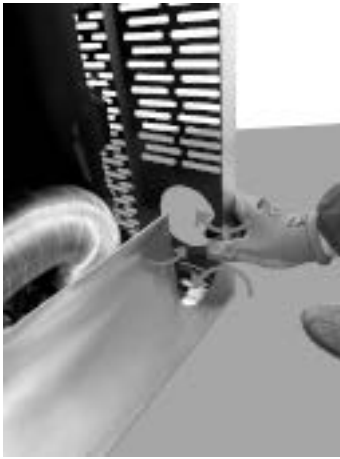


Fig. 90 - Fold the tabs



Fig. 91 - Detach the hose



Fig. 92 - Rotate the hose

- Take the side panel and remove the precut cap (see **Fig. 93**).
- Reposition the side panel on the stove (see **Fig. 94**).
- Connect a d.80 mm pipe to channel the air to another room (see **Fig. 95**).



Fig. 93 - Remove the cap



Fig. 94 - Position the side panel

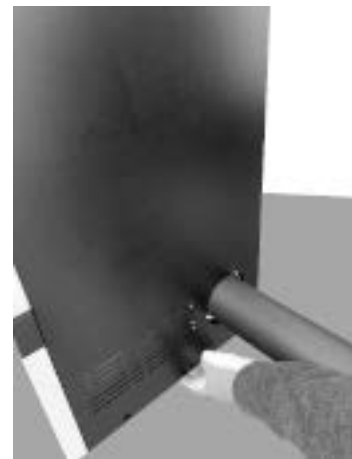


Fig. 95 - Connect ducting pipe

REAR DUCTING (RIGHT AND/OR LEFT)

- Remove the side panel (see **REMOVAL OF SIDE PANELS (MITHOS3 PLUS 12/14) a pag. 23**).
- Remove the clamps and the hose (see **Fig. 96**).
- Connect a d.80 mm pipe to channel the air to another room (see **Fig. 97**).
- Reposition the side panel on the stove.



Fig. 96 - Remove the hose



Fig. 97 - Connect the ducting pipe

TOP DUCTING

- Remove the side panel (see **REMOVAL OF SIDE PANELS (MITHOS3 PLUS 12/14) a pag. 23**).
- Remove the clamp and detach the hose from the vent of the grid (see **Fig. 98**).
- Rotate the hose towards the upper outlet (see **Fig. 99**).
- Remove the precut cap from the cover (see **Fig. 100**).



Fig. 98 - Detach the hose



Fig. 99 - Rotate the hose



Fig. 100 - Remove the cap

Insert the d.80 mm pipe into the hole to channel the air to another room (see **Fig. 101**).

Lower the pipe until it engages the hose (see **Fig. 102**) and lock with a clamp.

Fold the tab located in the middle of the stove and, with a clamp, lock the vertical pipe (see **Fig. 103**).

Reposition the side panel on the stove.



Fig. 101 - Insert the ducting pipe



Fig. 102 - Connect the pipes

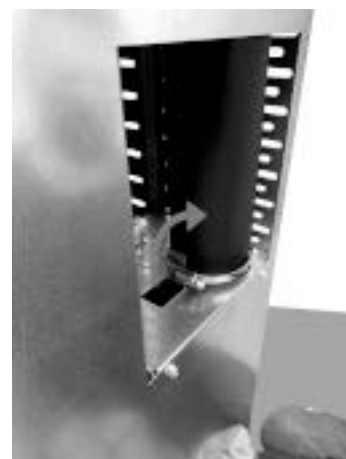


Fig. 103 - Lock the ducting pipe



Fig. 104 - Ducting system example

- A stove with no ducting has a variable air flow rate from a minimum of 59 m³/h to a maximum of 153 m³/h, and an air temperature which varies from a minimum of 90°C to a maximum of 150°C; these data are valid for each of the 2 outputs and the fan of the central environment.
- In the case of ducting, it is recommended not to exceed 8 metres of pipe and 3 x 90° bends, otherwise the hot air loses its effectiveness.
- Use pipes with an 80 mm diameter with smooth internal walls.
- If the pipes pass through cold walls, insulate the pipe with insulating material.
- Place a protective grille with large mesh and a total minimum net surface area of 24 cm² over the outlet.
- There can be a variable air flow rate from a minimum of 35 m³/h to a maximum of 80 m³/h and an air temperature which varies from a minimum of 40°C to a maximum of 100°C after the 8 metres of pipe. (These values were recorded in the testing laboratory; there may be differences in flow and temperature in the installation room).
- If you wish to increase the air flow, install a small wall-mounted fan on the outlet with a flow rate of more than 80 m³/h; this should be performed by an authorised technician.
- With the factory parameters, 26% of the heat produced by the stove is conveyed into the room where it is installed and the remaining 37% comes out from the ducting on the right and 37% from the left one.
- To get the best performance you need to balance the power with the air flow. This operation must be performed with the assistance of an authorised technician.
- The ductable fans cannot be deactivated, but they can be operated at a power value between 1 and 5 or in automatic mode.

6.19 USING THE STOVE WITHOUT DUCTING (ATENA³ PLUS 12/14 - DUKE 12/14 AIRTIGHT - SABA 12/14)

The stove can be used without ducting the air to other environments.

In this case, assemble the environment diffuser in the stove's rear (where the ducting outlet is foreseen) (see **Fig. 105**).



Fig. 105 - Diffuser assembly



Fig. 106 - Athena in the corner

*Corner installation is prohibited. The rear hot air causes the stove to overheat which triggers the thermostat alarm **Fig. 106**.*

6.20 ELECTRIC CONNECTION



Warning: the appliance must be installed by an authorized technician!

- The electric connection occurs through a cable with plug put in an electric socket which is able to support charge and tension specific of every model, as described in the technical datas table (see **FEATURES a pag. 40**).
- The plug must be easily accessible when the appliance is installed.
- Please further assure you that your network is endowed with an efficient earth connection: if it does not exist or if it is not efficient, please endow you with one in compliance with the law.
- Connect the supply cable first on the back of the stove (see **Fig. 107** and **Fig. 108**) and then at a wall electric socket.



Fig. 107 - Electric socket with master switch



Fig. 108 - Plug connected

- Do not use extension cables.
- If the feeder cable is damaged, it must be replaced by an authorized technician.
- When the stove is not going to be used for a long period of time, it advisable to remove the plug from the socket on the wall.
- An electrical connection to a UPS/ACCUMULATOR/ STABILISER must guarantee a voltage of at least 210 V without power surges. Considering the variety of UPS on the market regarding size and construction qualities, we cannot guarantee operation once the stove is connected to these devices.

6.21 STOVE CALIBRATION AND DEPRESSION MEASUREMENT

This stove has a pickup point positioned on the tank in order to measure the depression of the combustion chamber and verify its proper operation.

To do this, proceed as follows:

- Unscrew nut "D" on the rear of the stove and connect a digital pressure switch with a tube to detect the negative pressure (see **Fig. 109** or **Fig. 110**).
- Load the feed screw via appropriate function.
- Start the stove and set "Set_Flame" to power 1 (the start-up time of this stove lasts between 8 and 10 minutes to ensure minimum draught).

- Compare the read values with those on the table.
- Change power every 10 minutes and wait for it to stabilise.
- Access the user menu and, if necessary, change the parameters.



Fig. 109 - Digital pressure switch connection (Atena³ Plus12/14 - Duke 12/14 At - Saba 12/14)

| DATA | P1 | P2 | P3 | P4 | P5 |
|--------------------------------------|---------------|---------------|---------------|---------------|---------------|
| Stove depression - temperature 12 kW | 20 Pa - 105°C | 32 Pa - 135°C | 45 Pa - 165°C | 63 Pa - 195°C | 73 Pa - 215°C |
| Stove depression - temperature 14 kW | 20 Pa - 105°C | 32 Pa - 140°C | 40 Pa - 170°C | 52 Pa - 205°C | 63 Pa - 225°C |



Fig. 110 - Digital pressure switch connection (Mithos³ Plus12/14)

| DATA | P1 | P2 | P3 | P4 | P5 |
|--------------------------------------|--------------|---------------|---------------|---------------|---------------|
| Stove depression - temperature 12 kW | 17 Pa - 95°C | 28 Pa - 130°C | 37 Pa - 155°C | 52 Pa - 180°C | 58 Pa - 220°C |
| Stove depression - temperature 14 kW | 17 Pa - 95°C | 26 Pa - 140°C | 45 Pa - 175°C | 55 Pa - 220°C | 68 Pa - 240°C |

NB: for good combustion, the depression values must be between + - 5 Pa and the temperature values between + - 10°C.

6.22 CONNECTION TO THE EXTERNAL THERMOSTAT

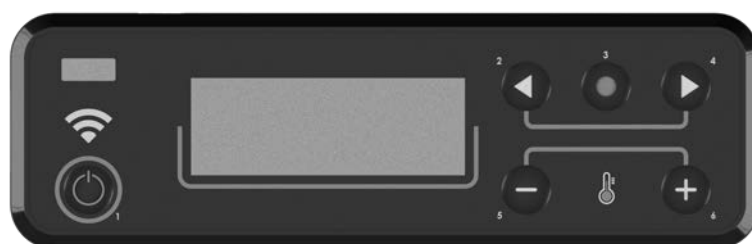


Fig. 111 - Graphic display

The stove works through a thermostat probe placed in its inner. If you desire, the stove can be connected to an external room thermostat. This operation must be executed by an authorized technician.

Connect the wires from the external thermostat to the "Term opt" terminal on the stove board. Activate the external thermostat (default setting OFF) as indicated below:

- Press the "menu" button.
- Scroll with the arrows to "Settings".
- Select by pressing "menu".
- Scroll with the arrows again to "Ext.Thermostat".
- Select by pressing "menu".
- Press the - + buttons.
- To activate the external thermostat select "on".
- Press the "menu" button to confirm.

7 SPECIAL MAINTENANCE

7.1 INTRODUCTION

For a long working life of the stove, have a periodic cleaning of the stove as described in the following paragraphs.

- Fume outlet pipes (fume conduit + chimney flue + chimney pot) must always be cleaned, scrubbed and checked by an authorized technician in compliance with local regulations, with the instructions of the manufacturer and those of your insurance company.
- If there are no local regulations and no instruction from your insurance company, it is necessary to have your fume pipe, chimney flue and chimney pot cleaned at least once a year.
- It is also necessary to have the combustion chamber, motors and fans cleaned and to have the gaskets and the electrical elements checked at least once a year.



All these operations must be planned in time with your Authorized Technical Assistance Service.

- After a long ineffective time, before turning on the stove check if there are obstructions in the fume exhaust.
- If the stove had been using continuously and intensely, the whole system (chimney included), must be cleaned and checked more frequently.
- In case of replacement of damaged pieces please ask for the original spare part at the Authorized Retailer.

7.2 FUME CHAMBER CLEANING

Every end-of-season (or every 2000 hours of operation) it is necessary to clean the fume chamber.

- Open the door and release the panel below the door (see dedicated chapter).
- Remove the burning pot (see **Fig. 112**) from its seat and empty all ash.
- Clean and vacuum the burning pot compartment of any ash accumulated inside (see **Fig. 113**).
- Remove the inspection cap (see **Fig. 114**).



Fig. 112 - Remove the burning pot



Fig. 113 - Vacuum out the ash



Fig. 114 - Remove the cap

- Clean with a pipe cleaner and suction any ash accumulated inside (see **Fig. 115** and **Fig. 116**).
- After cleaning, repeat the operation in reverse making sure the gasket is intact and efficient: if necessary, have it replaced by

an authorised technician.



Fig. 115 - Clean with pipe cleaner



Fig. 116 - Vacuum out the ash

7.3 FUME CONDUIT CLEANING

The exhaust system must be cleaned every 2/3 months.



Fig. 117 - Fume conduit cleaning

- Remove the inspection lid of the T-union (see **Fig. 117**).
- Extract the ash which has accumulated in the inner.
- After cleaning repeat the operation in reverse order, checking the condition and efficiency of the gasket, and if necessary replace it.



It is important to sealed the cap othwise noxious fumes will propagate among the room.

7.4 FUME PASSAGE CLEANING

Every end-of-season (or every 2000 hours of operation) it is necessary to clean the fume passages.

- Remove the door (see the dedicated chapter).
- Undo the screws of the door deflector (see **Fig. 118**) and remove it.
- Undo the hex head screws that block the cast-iron tiles of the hearth, on both sides (see **Fig. 119**).
- Push the head of the firebox up (see **Fig. 120**), tilt the piece and pull it out (see **Fig. 121**).



Fig. 118 - Remove the deflector



Fig. 119 - Remove the hex screws



Fig. 120 - Remove the head of the firebox 1

- Then remove the side walls of the firebox (see **Fig. 122**).
- Lastly remove the back panel of the firebox (see **Fig. 123**).



Fig. 121 - Remove the head of the firebox 2



Fig. 122 - Remove the side walls



Fig. 123 - Remove the back panel of the firebox

- Clean with a pipe cleaner and suction any ash accumulated inside (see **Fig. 124**).
- Part of the ash will fall into the compartment below the firebox (see **Fig. 125**). See the previous chapter for the cleaning operation.



Fig. 124 - Clean with pipe cleaner



Fig. 125 - Vacuum out the ash

7.5 FUME FAN CLEANING

Clean every the year the fume fan from ash or dust which can cause a blade unbalance and a greater noise.

- Open the door and release the panel under the door (see dedicated chapter).
- Remove the inspection cap (see **Fig. 126**).
- Unscrew the 2 screws of the smoke deflector inside (see **Fig. 127**) and remove it (see **Fig. 128**).



Fig. 126 - Remove the cap

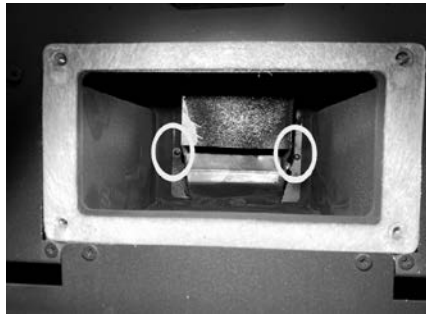


Fig. 127 - Unscrew the screws



Fig. 128 - Remove the fume diverter

- Vacuum the blades of the fume extraction fan (see **Fig. 129**).
- After cleaning, repeat the operation in reverse making sure the gasket is intact and efficient: if necessary, have it replaced by an authorised technician.



Fig. 129 - Vacuum out the ash

7.6 ROOM FAN CLEANING

Clean every the year the room fan from ash or dust which can cause a blade unbalance and a greater noise.



Fig. 130 - Room fan cleaning



Fig. 131 -

- Unscrew the side screws. (see dedicated chapters).
- Remove dust build-up using a brush or a vacuum cleaner (see **Fig. 130 Fig. 131**).

8 IN CASE OF ANOMALY












8.1 PROBLEM SOLVING






















Before of every Authorized Technician intervention, the same Technician has the duty to check if the parameters of the mother board correspond to those of the table you own.



In case of doubts regarding the use of the stove, please contact ALWAYS the Authorized Technician on order to avoid irreparable damages!

| PROBLEM | CAUSE | SOLUTION | INTERVENTION |
|---|---|--|---|
| The control display does not switch on | The stove is without power supply | Check if the plug is connected. |  |
| | Burned protection fuse in the electric socket | Replace the protection fuses in the electric socket (3.15A-250V). |  |
| | Faulty control display | Replace the control display. |  |
| | Faulty flat cable | Replace the flat cable. |  |
| | Faulty electronic board | Replace the mother board. |  |
| Pellets do not reach the combustion chamber | Empty hopper | Full the hopper. |  |
| | Open fire door or open pellet door | Close fire door and pellet door and check that there are no pellet grains at the gasket level. |  |
| | Clogged stove | Fume chamber cleaning |  |
| | Auger blocked by a foreign object (for example nails) | Clean the auger. |  |
| | The auger geared motor is out of order | Replace the geared motor. |  |
| | Check if on the display there is an "ACTIVE ALARM" | Have the stove checked. |  |

| PROBLEM | CAUSE | SOLUTION | INTERVENTION |
|--|---|---|---|
| The fire extinguish and the stove stops | Empty hopper | Full the hopper. |  |
| | Auger blocked by a foreign object (for example nails) | Clean the auger. |  |
| | Bad quality pellets | Try other types of pellets. |  |
| | Pellet drop value too low "phase 1" | Adjust the pellet loading. |  |
| | Check if on the display there is an "ACTIVE ALARM" | Have the stove checked. |  |
| Flames are weak and orange coloured, pellets do not burn properly and the glass blackens | Not sufficient combustion air | Check as following: probable obstructions of the combustible air inlet from the back or from the bottom of the stove; burning pot obstructed holes with too ash remains. Have the fan blades and auger cleaned. (see SMOKE RPM VARIATION User Manual) |  |
| | Obstructed exhaust | The exhaust chimney is partially or totally obstructed. Contact an expert stove-repairer who checks the stove from the exhaust up to the chimney pot. Provide immediately for stove cleaning. |  |
| | Obstructed stove | Provide immediately at the inner cleaning of the stove. |  |
| | The fume fan is out of order | The pellets can burn also thanks to chimney flue depression without the aid of the fume fan. Have the fume fan immediately replaced. It can be noxious to health to let the stove running without fume fan. |  |
| The exchanger fan continues to turn even though the stove has just cooled | Faulty fume temperature probe | Replace the fume probe. |  |
| | Faulty mother board | Replace the mother board. |  |
| Ash remains along the stove | Faulty or out of order door gaskets | Replace the gaskets. |  |
| | Not sealed fume pipes | Contact an expert stove-repairer who will immediately provide for sealing the junctions with high-temperature silicone and/or for replacing pipes with those in compliance to current regulations. A not sealed fume channelisation can be noxious to health. |  |
| The stove is at its highest power but does not heat up. | Ambient temperature reached. | The stove is at its minimum value. Increase the desired ambient temperature. |  |
| Stove running and display showing "Smoke Overtemperature" | Reached fume outlet limit temperature | The stove runs at minimum. NO PROBLEM! |  |

| PROBLEM | CAUSE | SOLUTION | INTERVENTION |
|--|--|---|---|
| The stove's smoke duct produces condensation | Low smoke temperature | Check that the flue is not clogged. |  |
| | | Increase stove power to minimum (pellet drop and fan revs). |  |
| | | Install condensation collection cup. |  |
| Stove running and display showing "SERVICE" | Routine maintenance alert (it does not block the system) | When this flashing message appears upon start-up, it means that the preset operating hours have elapsed before maintenance. Contact the service centre. |  |

9 TECHNICAL DATAS

9.1 REPAIR INFORMATION

Now we give some instructions for the Authorized Technician to take into consideration to have access to stove mechanical components.

- For fuse replacement in the electric socket which stands on the back of the stove, extract the fuses to change with the aid of a screwdriver for opening the shutter (see **Fig. 132**).



Fig. 132 - Shutter with fuses to remove

Proceed as follows:

- Remove the frame (see the dedicated chapters).
- After these operations you can have access at the following components: geared motor, ignition plug, ambient fan, fume fan, ambient probe, fume probe, thermostat, electronic board, pressostat.
- For cleaning or replacement of the auger it is necessary to unscrew the three bolt of the geared motor and to extract it, unscrew the two screws lying under the geared motor (vedi **Fig. 133**), of the auger, remove the hand rejector inside the hopper and then unscrew the inner bolt of the auger. (vedi **Fig. 134**). To assembly proceed at the contrary.



Fig. 133 - Remove the screws



Fig. 134 - Remove the screw

10 FEATURES

| DESCRIPTION | ATENA ³ PLUS 12 | DUKE 12 AIRTIGHT | SABA 12 |
|---|------------------------------|------------------------------|------------------------------|
| WIDTH | 58 cm | 58 cm | 54 cm |
| DEPTH | 58 cm | 58 cm | 57 cm |
| HEIGHT | 114 cm | 114 cm | 114 cm |
| WEIGHT | 152 - 160 kg | 155 kg | 138 kg |
| INTRODUCED THERMAL POWER (Min/Max) | 4 - 13,3 kW | 4 - 13,3 kW | 4 - 13,3 kW |
| NOMINAL THERMAL POWER (Min/Max) | 3,8 - 12 kW | 3,8 - 12 kW | 3,8 - 12 kW |
| EFFICIENCY (Min/Max) | 93,5 - 90 % | 93,5 - 90 % | 93,5 - 90 % |
| FLUE GAS TEMPERATURE (Min/Max) | 81 - 185 °C | 81 - 185 °C | 81 - 185 °C |
| MAXIMUM FLUE GAS FLOW RATE (Min/Max) | 3,9 - 8,1 g/s | 3,9 - 8,1 g/s | 3,9 - 8,1 g/s |
| CO EMISSIONS (13% O ₂) (Min/Max) | 0,0149 - 0,0142 % | 0,0149 - 0,0142 % | 0,0149 - 0,0142 % |
| OGC EMISSIONS (13% O ₂) (Min/Max) | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ |
| NOX EMISSIONS (13% O ₂) (Min/Max) | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ |
| Average CO CONTENT at 13% O ₂ (Min/Max) | 186 - 177 mg/Nm ³ | 186 - 177 mg/Nm ³ | 186 - 177 mg/Nm ³ |
| Average DUST CONTENT at 13% O ₂ (Min/Max) | 19 - 14 mg/Nm ³ | 19 - 14 mg/Nm ³ | 19 - 14 mg/Nm ³ |
| FLUE NEGATIVE PRESSURE (Min/Max) | 11 - 10 Pa | 11 - 10 Pa | 11 - 10 Pa |
| ON SHARED FLUE | NO | NO | NO |
| FLUE GAS EXHAUST DIAMETER | Ø80 mm | Ø80 mm | Ø80 mm |
| FUEL | Pellet Ø6-7 mm | Pellet Ø6-7 mm | Pellet Ø6-7 mm |
| PELLET HEATING CAPACITY | 5 kWh/kg | 5 kWh/kg | 5 kWh/kg |
| PELLET HUMIDITY | ≤ 10% | ≤ 10% | ≤ 10% |
| HEATABLE VOLUME 18/20°C Coeff. 0.045 kW (Min/Max) | 91 - 288 m ³ | 91 - 288 m ³ | 91 - 288 m ³ |
| HOURLY CONSUMPTION (Min/Max) | 0,86 - 3 kg/h | 0,86 - 3 kg/h | 0,86 - 3 kg/h |
| HOPPER CAPACITY | 23 kg | 23 kg | 23 kg |
| RANGE (Min/Max) | 8 - 27 h | 8 - 27 h | 8 - 27 h |
| POWER SUPPLY | 230 V - 50 Hz | 230 V - 50 Hz | 230 V - 50 Hz |
| ABSORBED POWER (Max) | 151 kW | 151 kW | 151 kW |
| STARTER RESISTANCE ABSORBED POWER | 300 W | 300 W | 300 W |
| MINIMUM EXTERNAL AIR VENT (final cross-section) | 80 cm ² | 80 cm ² | 80 cm ² |
| SEALED CHAMBER STOVE | YES | YES | YES |
| EXTERNAL AIR VENT FOR SEALED CHAMBER | 60 mm | 60 mm | 60 mm |
| DISTANCE FROM COMBUSTIBLE MATERIAL (back/side/bottom) | 300 / 200 / 0 mm | 300 / 200 / 0 mm | 300 / 200 / 0 mm |
| DISTANCE FROM COMBUSTIBLE MATERIAL (ceiling/front) | - / 1000 mm | - / 1000 mm | - / 1000 mm |

| DESCRIPTION | ATENA ³ PLUS 14 | DUKE 14 AIRTIGHT | SABA 14 |
|---|------------------------------|------------------------------|------------------------------|
| WIDTH | 58 cm | 58 cm | 54 cm |
| DEPTH | 58 cm | 58 cm | 57 cm |
| HEIGHT | 114 cm | 114 cm | 114 cm |
| WEIGHT | 152 - 160 kg | 155 kg | 138 kg |
| INTRODUCED THERMAL POWER (Min/Max) | 4 - 15,7 KW | 4 - 15,7 KW | 4 - 15,7 KW |
| NOMINAL THERMAL POWER (Min/Max) | 3,8 - 14 kW | 3,8 - 14 kW | 3,8 - 14 kW |
| EFFICIENCY (Min/Max) | 93,5 - 89 % | 93,5 - 89 % | 93,5 - 89 % |
| FLUE GAS TEMPERATURE (Min/Max) | 81 - 210 °C | 81 - 210 °C | 81 - 210 °C |
| MAXIMUM FLUE GAS FLOW RATE (Min/Max) | 3,9 - 9,2 g/s | 3,9 - 9,2 g/s | 3,9 - 9,2 g/s |
| CO EMISSIONS (13% O ₂) (Min/Max) | 0,0149 - 0,0197 % | 0,0149 - 0,0197 % | 0,0149 - 0,0197 % |
| OGC EMISSIONS (13% O ₂) (Min/Max) | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ |
| NOX EMISSIONS (13% O ₂) (Min/Max) | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ |
| Average CO CONTENT at 13% O ₂ (Min/Max) | 186 - 247 mg/Nm ³ | 186 - 247 mg/Nm ³ | 186 - 247 mg/Nm ³ |
| Average DUST CONTENT at 13% O ₂ (Min/Max) | 19 - 15 mg/Nm ³ | 19 - 15 mg/Nm ³ | 19 - 15 mg/Nm ³ |
| FLUE NEGATIVE PRESSURE (Min/Max) | 11 - 13 Pa | 11 - 13 Pa | 11 - 13 Pa |
| ON SHARED FLUE | NO | NO | NO |
| FLUE GAS EXHAUST DIAMETER | Ø80 mm | Ø80 mm | Ø80 mm |
| FUEL | Pellet Ø6-7 mm | Pellet Ø6-7 mm | Pellet Ø6-7 mm |
| PELLET HEATING CAPACITY | 5 kWh/kg | 5 kWh/kg | 5 kWh/kg |
| PELLET HUMIDITY | ≤ 10% | ≤ 10% | ≤ 10% |
| HEATABLE VOLUME 18/20°C Coeff. 0.045 kW (Min/Max) | 91 - 336 m ³ | 91 - 336 m ³ | 91 - 336 m ³ |
| HOURLY CONSUMPTION (Min/Max) | 0,86 - 3,5 kg/h | 0,86 - 3,5 kg/h | 0,86 - 3,5 kg/h |
| HOPPER CAPACITY | 23 kg | 23 kg | 23 kg |
| RANGE (Min/Max) | 7 - 27 h | 7 - 27 h | 7 - 27 h |
| POWER SUPPLY | 230 V - 50 Hz | 230 V - 50 Hz | 230 V - 50 Hz |
| ABSORBED POWER (Max) | 153 kW | 153 kW | 153 kW |
| STARTER RESISTANCE ABSORBED POWER | 300 W | 300 W | 300 W |
| MINIMUM EXTERNAL AIR VENT (final cross-section) | 80 cm ² | 80 cm ² | 80 cm ² |
| SEALED CHAMBER STOVE | YES | YES | YES |
| EXTERNAL AIR VENT FOR SEALED CHAMBER | 60 mm | 60 mm | 60 mm |
| DISTANCE FROM COMBUSTIBLE MATERIAL (back/side/bottom) | 300 / 200 / 0 mm | 300 / 200 / 0 mm | 300 / 200 / 0 mm |
| DISTANCE FROM COMBUSTIBLE MATERIAL (ceiling/front) | - / 1000 mm | - / 1000 mm | - / 1000 mm |

| DESCRIPTION | MITHOS ³ PLUS 12 | MITHOS ³ PLUS 14 | - |
|---|------------------------------|------------------------------|---|
| WIDTH | 95 cm | 95 cm | |
| DEPTH | 43 cm | 43 cm | |
| HEIGHT | 118,5 cm | 118,5 cm | |
| WEIGHT | 165 kg | 165 kg | |
| INTRODUCED THERMAL POWER (Min/Max) | 4 - 13,3 kW | 4 - 15,7 kW | |
| NOMINAL THERMAL POWER (Min/Max) | 3,8 - 12 kW | 3,8 - 14 kW | |
| EFFICIENCY (Min/Max) | 93,5 - 90 % | 93,5 - 89 % | |
| FLUE GAS TEMPERATURE (Min/Max) | 81 - 185 °C | 81 - 210 °C | |
| MAXIMUM FLUE GAS FLOW RATE (Min/Max) | 3,9 - 8,1 g/s | 3,9 - 9,2 g/s | |
| CO EMISSIONS (13% O ₂) (Min/Max) | 0,0149 - 0,0142 % | 0,0149 - 0,0197 % | |
| OGC EMISSIONS (13% O ₂) (Min/Max) | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ | |
| NOX EMISSIONS (13% O ₂) (Min/Max) | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ | |
| Average CO CONTENT at 13% O ₂ (Min/Max) | 186 - 177 mg/Nm ³ | 186 - 247 mg/Nm ³ | |
| Average DUST CONTENT at 13% O ₂ (Min/Max) | 19 - 14 mg/Nm ³ | 19 - 15 mg/Nm ³ | |
| FLUE NEGATIVE PRESSURE (Min/Max) | 11 - 10 Pa | 11 - 13 Pa | |
| ON SHARED FLUE | NO | NO | |
| FLUE GAS EXHAUST DIAMETER | Ø80 mm | Ø80 mm | |
| FUEL | Pellet Ø6-7 mm | Pellet Ø6-7 mm | |
| PELLET HEATING CAPACITY | 5 kWh/kg | 5 kWh/kg | |
| PELLET HUMIDITY | ≤ 10% | ≤ 10% | |
| HEATABLE VOLUME 18/20°C Coeff. 0.045 kW (Min/Max) | 91 - 288 m ³ | 91 - 336 m ³ | |
| HOURLY CONSUMPTION (Min/Max) | 0,86 - 3 kg/h | 0,86 - 3,5 kg/h | |
| HOPPER CAPACITY | 23 kg | 23 kg | |
| RANGE (Min/Max) | 8 - 27 h | 7 - 27 h | |
| POWER SUPPLY | 230 V - 50 Hz | 230 V - 50 Hz | |
| ABSORBED POWER (Max) | 151 kW | 153 kW | |
| STARTER RESISTANCE ABSORBED POWER | 300 W | 300 W | |
| MINIMUM EXTERNAL AIR VENT (final cross-section) | 80 cm ² | 80 cm ² | |
| SEALED CHAMBER STOVE | YES | YES | |
| EXTERNAL AIR VENT FOR SEALED CHAMBER | 60 mm | 60 mm | |
| DISTANCE FROM COMBUSTIBLE MATERIAL (back/side/bottom) | 300 / 200 / 0 mm | 300 / 200 / 0 mm | |
| DISTANCE FROM COMBUSTIBLE MATERIAL (ceiling/front) | - / 1000 mm | - / 1000 mm | |

| DESCRIPTION | MITHOS PLUS 12 PS | MITHOS PLUS 14 PS | - |
|---|------------------------------|------------------------------|---|
| WIDTH | 95 cm | 95 cm | |
| DEPTH | 43 cm | 43 cm | |
| HEIGHT | 118,5 cm | 118,5 cm | |
| WEIGHT | 160 kg | 160 kg | |
| INTRODUCED THERMAL POWER (Min/Max) | 4 - 13,3 kW | 4 - 15,7 kW | |
| NOMINAL THERMAL POWER (Min/Max) | 3,8 - 12 kW | 3,8 - 14 kW | |
| EFFICIENCY (Min/Max) | 93,5 - 90 % | 93,5 - 89 % | |
| FLUE GAS TEMPERATURE (Min/Max) | 81 - 185 °C | 81 - 210 °C | |
| MAXIMUM FLUE GAS FLOW RATE (Min/Max) | 3,9 - 8,1 g/s | 3,9 - 9,2 g/s | |
| CO EMISSIONS (13% O ₂) (Min/Max) | 0,0149 - 0,0142 % | 0,0149 - 0,0197 % | |
| OGC EMISSIONS (13% O ₂) (Min/Max) | 3 - 3 mg/Nm ³ | 3 - 3 mg/Nm ³ | |
| NOX EMISSIONS (13% O ₂) (Min/Max) | 109 - 114 mg/Nm ³ | 109 - 114 mg/Nm ³ | |
| Average CO CONTENT at 13% O ₂ (Min/Max) | 186 - 177 mg/Nm ³ | 186 - 247 mg/Nm ³ | |
| Average DUST CONTENT at 13% O ₂ (Min/Max) | 19 - 14 mg/Nm ³ | 19 - 15 mg/Nm ³ | |
| FLUE NEGATIVE PRESSURE (Min/Max) | 11 - 10 Pa | 11 - 13 Pa | |
| ON SHARED FLUE | NO | NO | |
| FLUE GAS EXHAUST DIAMETER | Ø80 mm | Ø80 mm | |
| FUEL | Pellet Ø6-7 mm | Pellet Ø6-7 mm | |
| PELLET HEATING CAPACITY | 5 kWh/kg | 5 kWh/kg | |
| PELLET HUMIDITY | ≤ 10% | ≤ 10% | |
| HEATABLE VOLUME 18/20°C Coeff. 0.045 kW (Min/Max) | 91 - 288 m ³ | 91 - 336 m ³ | |
| HOURLY CONSUMPTION (Min/Max) | 0,86 - 3 kg/h | 0,86 - 3,5 kg/h | |
| HOPPER CAPACITY | 23 kg | 23 kg | |
| RANGE (Min/Max) | 8 - 27 h | 7 - 27 h | |
| POWER SUPPLY | 230 V - 50 Hz | 230 V - 50 Hz | |
| ABSORBED POWER (Max) | 151 kW | 153 kW | |
| STARTER RESISTANCE ABSORBED POWER | 300 W | 300 W | |
| MINIMUM EXTERNAL AIR VENT (final cross-section) | 80 cm ² | 80 cm ² | |
| SEALED CHAMBER STOVE | YES | YES | |
| EXTERNAL AIR VENT FOR SEALED CHAMBER | 60 mm | 60 mm | |
| DISTANCE FROM COMBUSTIBLE MATERIAL (back/side/bottom) | 300 / 200 / 0 mm | 300 / 200 / 0 mm | |
| DISTANCE FROM COMBUSTIBLE MATERIAL (ceiling/front) | - / 1000 mm | - / 1000 mm | |



89022140B

Rev. 00 - 2022

CADEL srl
31025 S. Lucia di Piave - TV
Via Foresto sud, 7 - Italy
Tel. +39.0438.738669
Fax +39.0438.73343

www.cadelsrl.com
www.free-point.it
www.pegasoheating.com